


1012 How to operate a Bunsen burner

What are the 5 steps to igniting and adjusting a Bunsen burner?

- 1- Open gas valve on bottom of burner
- 2- Spark ignitor flame
- 3- Slowly open gas valve until it valve points down gas line
- 4- Adjust yellow flame 6-8"
- 5- Open air breather until a double cone blue flame is shown

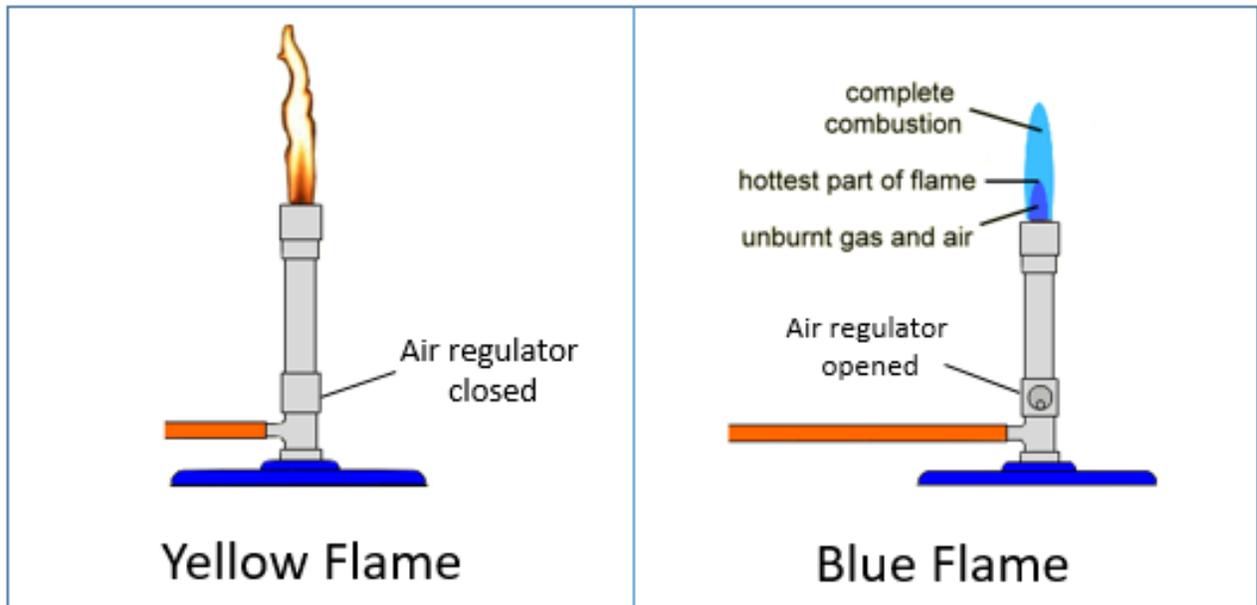

Indicate on the picture the air adjustor and the gas needle valve.

